
Cill Installation Guide


LINEAR CAST STONE
ARCHITECTURAL STONE SPECIALISTS

Email: sales@linearcaststone.co.uk
Tel: 01623 761602
www.linearcaststone.co.uk

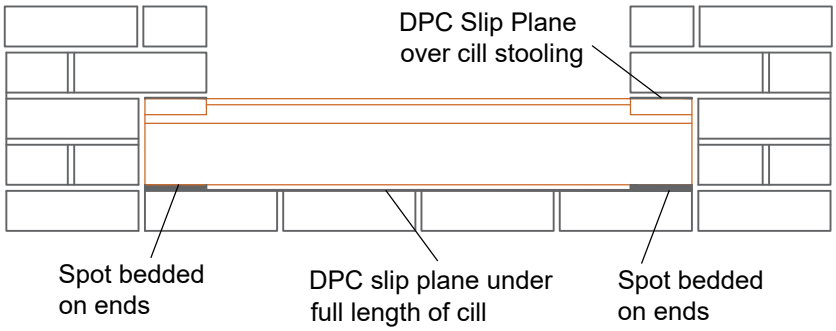

Cills should be spot bedded wih mortar under the ends ONLY. Fully bedding can result in cracking from differential movement of the building.
Remaining gap pointed once brickwork complete.

Please Note:
Shown is a typical /recommended detail only.
Specifics can vary. Consult your installation specialist.

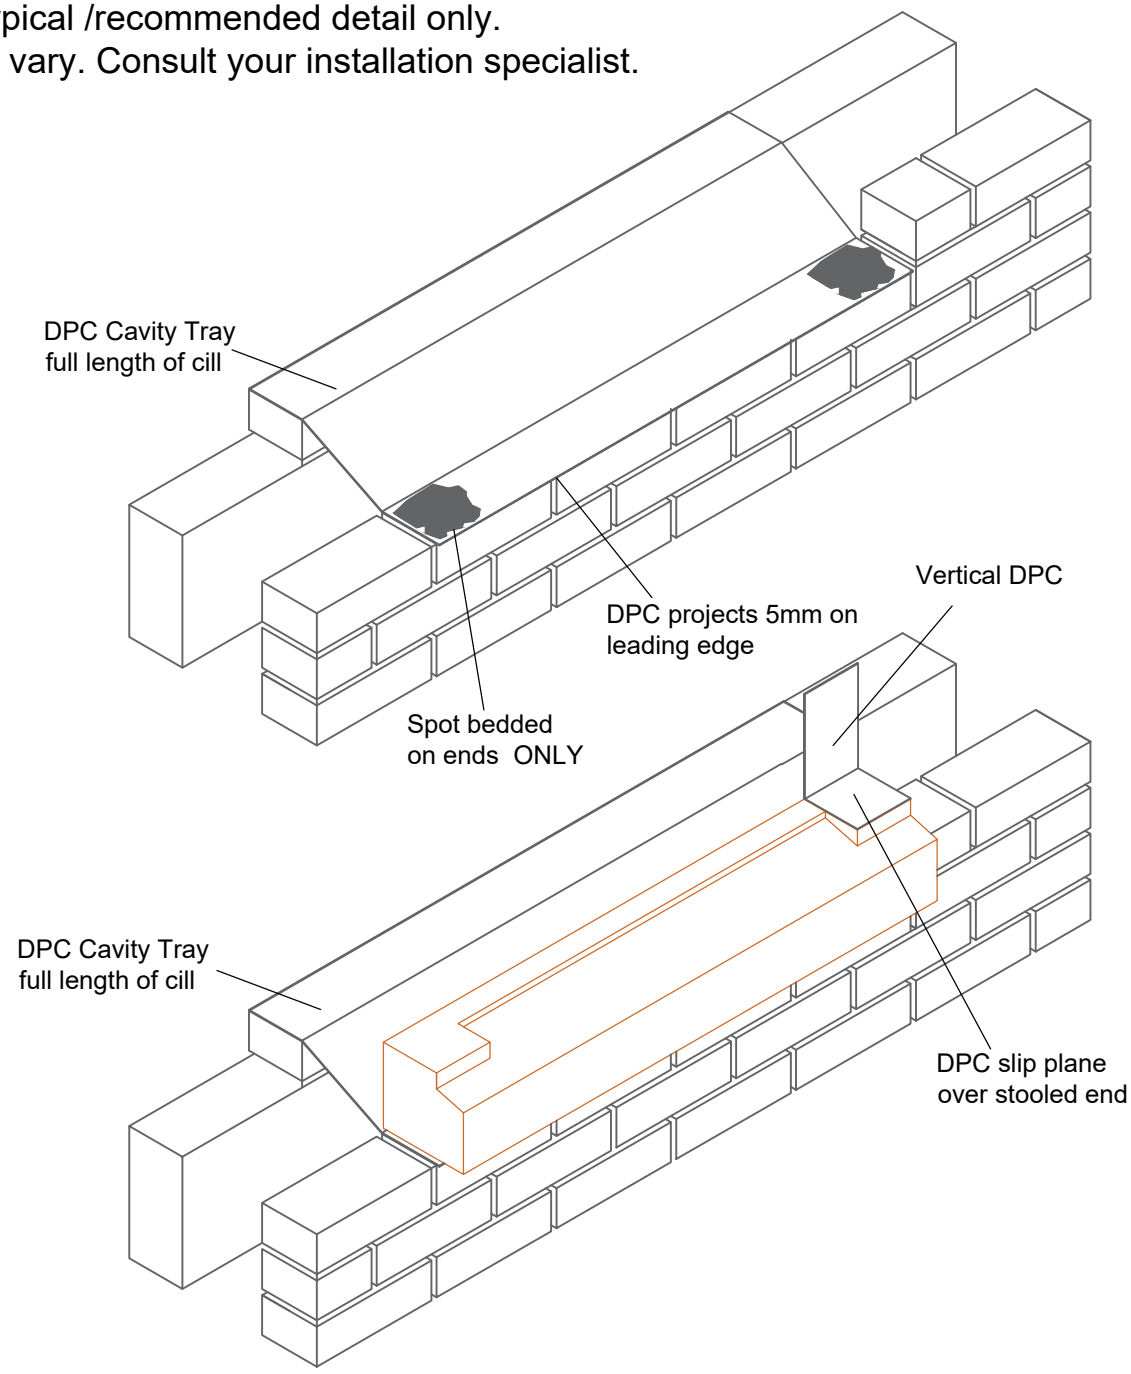

Drawing: LTS1